

Curraheen Bin



Curraheen Bin



DESCRIPTION

The Kent Curraheen Litter Bin KCHLB450 is made from grade 304 stainless steel and powder coated to any RAL colour.

The black version thrash can in these images was used for Curraheen Hospital in Co. Cork, Ireland. Stainless Finishes or Faux Imitation Corten or Tiger Bronze are also available.

The bin is perfect for public parks and high footfall areas. It is 950mm high x 450mm wide x 370mm depth. The bin also comes equipped with the standard 'Litterman' or 'Recycling' logos or text—but can be bespoke for nay project.

The smaller circular ope to the side can deter filling the bin with pizza boxes

FEATURES

- 304 Stainless Steel
- Powder Coated to Black RAL colour or any RAL code
- 950mm Height
- Decal Lettering and logos



Curraheen Hospital, Cork, Ireland—including Kent 'Ascot' Seats

DRAWING

Curraheen Bin





Piano Hinge

Slam Lock








PRODUCT DIMENSIONS

Fire resistant galvanised liner


| Reference | Height | Width | Depth |
|-----------|--------|-------|-----------|
| KCHLB450 | 950mm | 450mm | 80 litres |

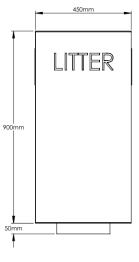



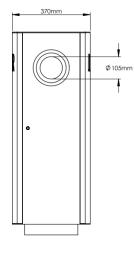



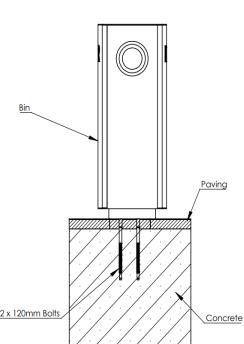

Curaheen Bin







Curraheen Hospital, Cork, Ireland

Specification

Choose your steel:

Grade 304 Stainless steel Grade 316 Stainless steel

Specify:

Kent Curraheen Litter Bin KCLB450;

L:450mm, H:950mm, W:370mm; 80 Litre Capacity; Grade 316L Stainless Steel; 3mm Thick Wall; Bright Satin Finish; Surface Mounted. Include 'Litterman Symbol' Decal;

Choose your Decals;, Litterman Recycling Symbol Recycle Text Custom Branding

Choose your Finish

Bright Satin
320 Grit Satin Finish
Bright Peened
Shot Peened
Tiger Bronze
Imitation Corten
Antique Copper
Metallic Black

Curraheen Bin



Installation of Litter bins:

Ensure that the surface to which the bin is mounted is to sufficiently strong.

Position the bin in the correct location. Mark the holes and drill into the surface

Place the bin directly over the holes and then fix the bin to the surface using M12 bolts.

There are 4 fixing points on the base for fitting to the ground using anchoring bolts


A typical foundation would be 750mm x 550mm x 550mm of 35N20 concrete - but this is the responsibility of the site engineer's specification

For Paved Areas:

Length of the M12 bolts will depend on the depth of the paver blocks plus bedding. For example, with 60mm deep paver blocks plus 20mm deep bedding, we recommend M12 X 180MM

For Non Paved areas:

M12 x 120mm bolts are recommended

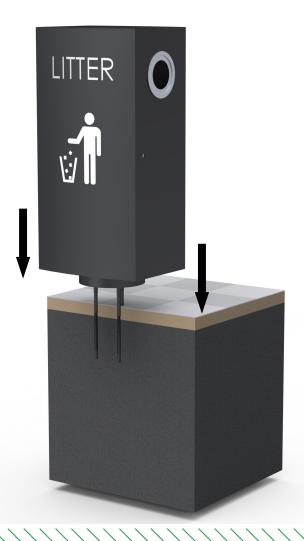

Curraheen Bin





Stainless



Faux Imitation Corten



Tiger Bronze



Bright Peened



Bright Satin



Satin Finish 320 Grit Polished



Shot Peened



Tiger Bronze



Imitation Corten



Antique Copper



Metallic Black







CLEANING & MAINTENANCE

Clean the stainless steel components using warm water with a mild detergent with a non-abrasive cloth or sponge. Heavier stains may require the use of a nylon-scouring pad or a stainless steel cleaner.

To remove paint or graffiti use a cloth and Alkaline or solvent paint strippers according to type of paint. In the case of a bead blasted finish, where abrasive cleaning is required, always use a random circular rubbing action with a cloth. In the case of brushed finishes the surface consists of uniform fine 'scratches' running in one direction so where abrasive cleaning is required always use a straight back and forward rubbing action in the direction of the grain using soap and warm water.

Rust spots or 'tea stains' can occur on the surface of the material, these are normally caused by contamination from ordinary mild steel, particularly in areas where construction work has been undertaken. Such stains can be removed using Rust Remover 410.


In cases where the surface is severely stained because of severe environmental conditions or scratched due to misuse, it may still be possible to restore the original finish using chemicals such as Oxalic Acid solution.

There are many stainless steel polishes available to enhance the surface finish. We recommend Mister Stainless Ltd. as a provider for stainless steel **cleaning products**.



Curraheen Hospital, Cork, Ireland

KENT STAINLESS "A PARTNER YOU CAN RELY ON"

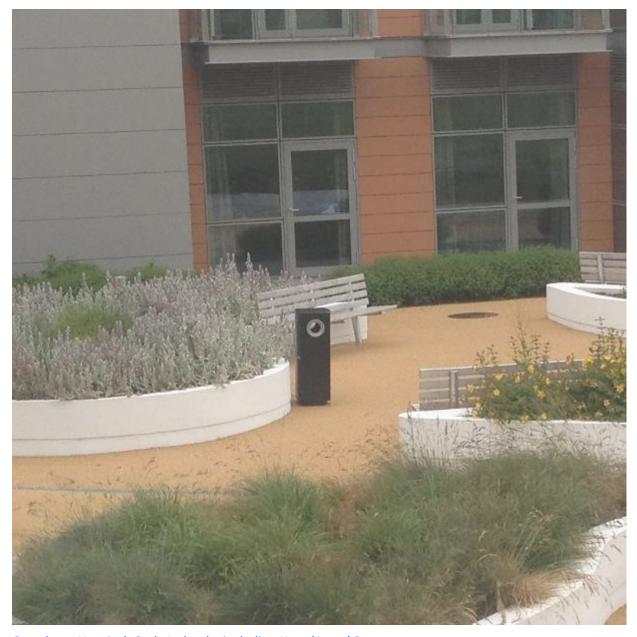

Curraheen Hospital, Cork, Ireland—including Kent 'Ascot' Seats

Contact us

Phone: +353 53 914 3216 UK Freephone: 0800 376 8377

USA: 781 374 7391

Email: info@kentstainless.com

Address: Ardcavan, Wexford, Ireland, Y35 CRW2



www.kentstainless.com

Made in Ireland